Wiring Diagram Number Code

Itama Numahan	Commonant	
Item Number	Component	
1	Rear near side indicator	
2	Rear near side brake light	
3	Rear near side reverse light	
4	Rear near side side light	
5	Rear near side fog light	
6	Number plate light	
7	Rear off side fog light	
8	Rear off side side light	
9	Rear off side reverse light	
10	Rear off side brake light	
11	Rear off side indicator	
12	Front near side indicator	
13	Front near side side light	
14	Front near side main beam	
15	Front near side dip beam	
16	Front off side dip beam	
17	Front off side main beam	
18	Front off side side light	
19	Front off side indicator	
20	Brake light switch	
21	Reverse light switch	
22	Indicator light switch	
23	Lights switch	
24	Main/Dip beam switch	
25	Fog lights switch	
26	Hazard lights switch	
28	Starter motor	
29	Alternator	
30	Battery	
31	Thermostat	
32	Ignition switch	
33	Cooling fan	
34	Heater fan switch	
35	Heater fan	
36	Wash/Wipe switch	
37	Wiper motor connection	
38	Washer motor	
39	Horn	
40	Horn switch	
41	Handbrake switch	
42	Oil pressure sender unit	
43	Oil pressure gauge	
44	Fuel pump	
45	Fuel gauge	
46	Fuel sender	
47	Coil	
48	Choke switch	
49	Fuel cut off switch	
50	Tachometer	
51	Water temperature gauge	
52	Temperature sender	

53	Automatic gearbox connection
54	Main beam warning light
55	Speedometer illumination
56	Fog lights switch illumination
57	Lights switch illumination
58	Hazard lights switch illumination
59	Heater switch illumination
60	Engine mount bracket – earth
61	Front chassis – earth
62	Rear chassis – earth

Wiring Colour Codes

Black	В
White	W
Red	R
Yellow	Υ
Green	G
Purple	Р
Brown	N
Blue	U
Light	L













